



**NOTES:**

1. Depth of excavation is 3 feet.
2. Keep as steep a slope along the sides of the excavation as possible.

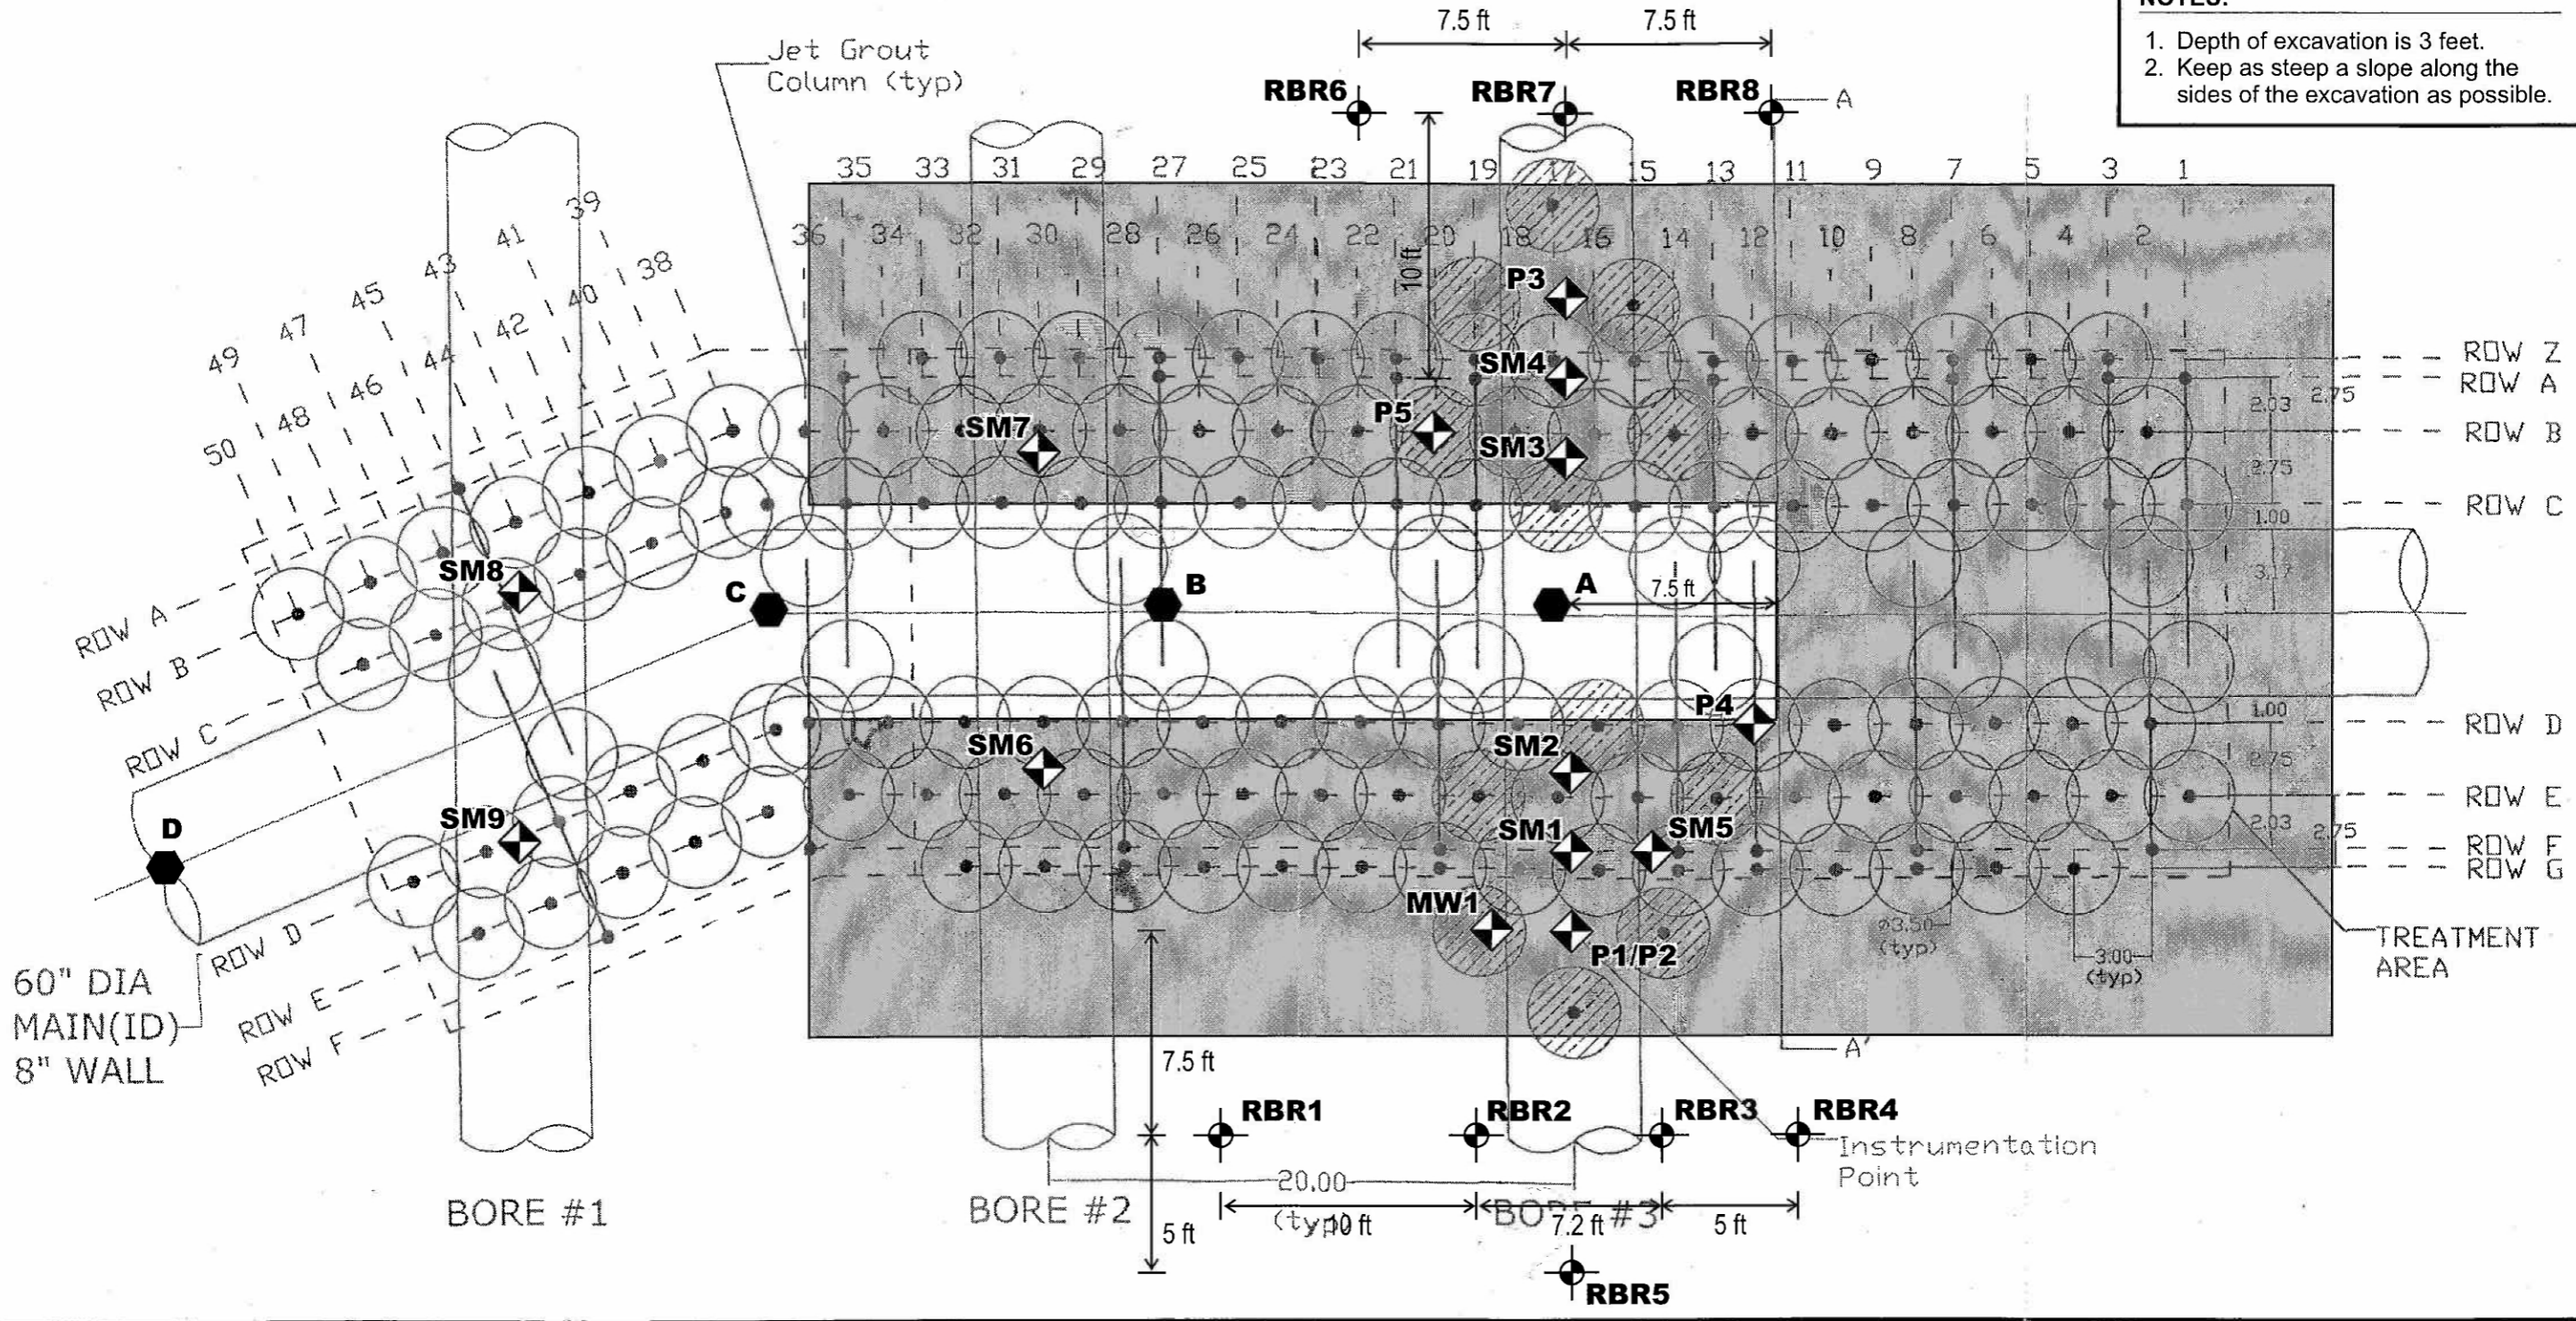

**LEGEND**

- SM ◈ Deep Settlement Markers Installed in January 2002 Before Jet-Grouting
- RBR ◈ Subsurface Settlement Markers Installed after Jet-Grouting
- P ◈ Piezometer
- Settlement Points Resting on the Top of the Force Main



**EXCAVATION PLAN**  
 April 2002  
 43-00067035.00  
 Islais Creek (Pier 80) Outfall  
 San Francisco, California

